

SecureX DoorSense Garage

Installation Manual

Modell: SSGARAGE-SX

Version: v1.0

Datum: 2026-02-18





1. Product Overview

SecureX DoorSense Garage is a wireless magnetic contact designed for garage doors and industrial doors.

The device monitors the door's open and closed status and sends a signal to the SecureX hub when a change occurs.

A push notification is sent in real time via the Stonehouse Smart app.

The device operates only in combination with a SecureX hub.

2. Technical Specifications

Power supply: 23A 12V battery.

Communication: 433 MHz (EV1527) – SecureX protocol.

Environment: <95% RH (non-condensing).

Weight: approx. 50 g.

3. Components

Transmitter (main unit with integrated sensor).

Magnet part.

LED indicator.

4. Placement and Function

The sensor is integrated into the transmitter.

The magnet part affects the sensor when the door is closed.

The sensor unit is mounted on the fixed part, for example the frame or floor.

The magnet part is mounted on the moving part, for example the garage door.

The two parts must be precisely aligned opposite each other in the closed position.

Incorrect alignment may prevent the opening from being registered correctly.

5. Installation

1. Öppna enheten och sätt i 23A 12V-batteriet.
2. Fäst sändaren på fast underlag.
3. Montera magnetdelen på portens rörliga del.
4. Kontrollera att delarna är korrekt linjerade i stängt läge.
5. Dra åt skruvarna ordentligt.

6. Pairing with SecureX Hub

1. Sätt hubben i parningsläge.
2. Öppna garageporten så att magneten separeras från sensorn.
3. LED blinkar när signal skickas.
4. Bekräfta i appen att enheten registreras.
5. Namnge enheten.



7. Function

When the door is opened, the magnet separates from the sensor.

A signal is sent to the SecureX hub.

A push notification is sent via the app.

When the door is closed, the device returns to normal status.

8. LED Indication

The LED briefly lights when a signal is transmitted.

A weak or absent LED indication may indicate a low battery level.

9. Troubleshooting

No notification when opening: Check the alignment between the sensor and magnet.

Short range: Place the sensor closer to the hub and avoid obstacles or metal between the devices or add SecureX SignalMax.

Irregular alarms: Ensure the unit is securely mounted.

IMPORTANT: Correct alignment between the sensor and magnet is essential for reliable operation.